 
 


SET-N-SERVE PARTS LIST

WIH SERIES - ELECTRIC HEATED UNIT WITH AUTOMATIC WATER FILL

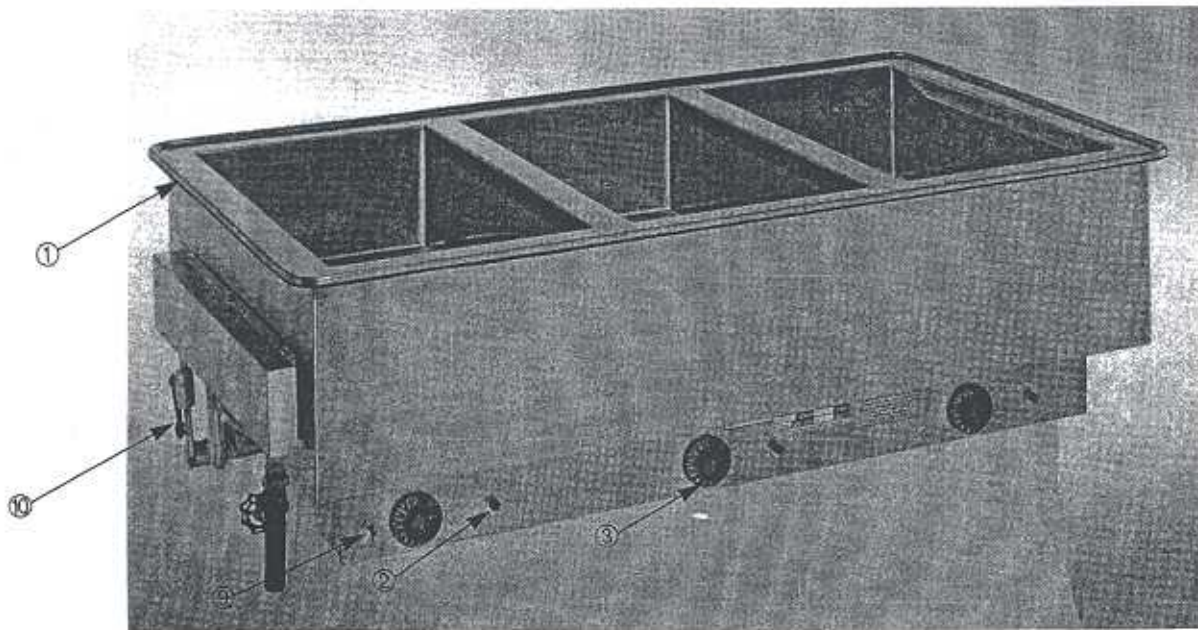

ITEM NUMBER	PART NUMBER	DESCRIPTION	ITEM NUMBER	PART NUMBER	DESCRIPTION
1	7002	Vinyl Bead Gasket	5	1014-2	#14 Nickel Wire Black (Not Shown)
2	1099	Pilot Light	5	1012-2	#12 Nickel Wire Black (Not Shown)
2	1088	P-136 Pronto Terminal (Not Shown)	6	1089	P-151 Pronto Terminal (Not Shown)
3	1096	Thermostat (Not Shown)	6	1090	P-144 Pronto Terminal (Not Shown)
3	1097	Dial	7	1002	Power Cord 120V (Not Shown)
3	1098	Screw-Thermostat Mounting (Not Shown)	7	1001	Power Cord 240V (Not Shown)
4	1058	Elements 1000W 208V (Not Shown)	7	1004	Power Cord (Not Shown)
4	1056	Elements 1000W 120V (Not Shown)	8	12-0228	20 Amp. Plug 250V (Not Shown)
4	1053	Elements 850W 120V (Not Shown)	8	1022	30 Amp. Plug 250V (not Shown)
4	1055	Elements 850W 240V (Not Shown)		1014-7	#12 Green Wire (Ground)
4	1054	Elements 850W 208V (Not Shown)		1014-8	#14 Green Wire (Ground)
	1057	Elements 1000W 240V		1001-1	50 Amp. Cord / Plug
	S-10153	Perforated Snap-In Drain for "D" Units	9	1070	Off/On Toggle Switch
	3016-1	Gate Brass Stop Valve For "D" Units	10		Auto Fill Assembly
	3006-2	3/4 Galvanized Nipple For "D" Units			
	2500	Remote Thermostat			

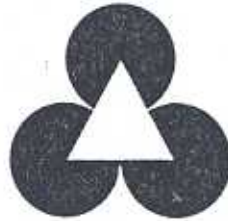

INSTALLATION, MAINTENANCE & PARTS LIST MANUAL


WIH SERIES ELECTRIC HEATED UNIT WITH AUTOMATIC WATER FILL

INSTALLATION

Cut required opening in counter top (see chart below) and drop in. The vinyl gasket assures complete seating. A silicone mat be used between the gasket and counter top.

Model Number	Cut-Out Opening
**WIH-1	22 ¹ / ₄ x 15 ⁷ / ₁₆
WIH-2	22 ¹ / ₄ x 28 ³ / ₄
WIH-3	22 ¹ / ₄ x 42 ¹ / ₂
WIH-4	22 ¹ / ₄ x 56 ¹ / ₄
WIH-5	22 ¹ / ₄ x 70
WIH-6	22 ¹ / ₄ x 83 ³ / ₄

**Control Panel on 14¹/₄ Side

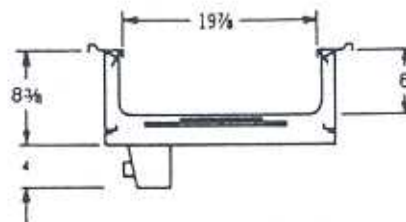

(SIDE SECTIONAL VIEW)

Operation

Unit comes with power cord and nema plug. Plug in to appropriate power source. The Auto Fill Assembly is pre-set at the factory. Do not try to adjust this unit for any reason. Any attempt to change or modify the location of this unit, will void the factory warranty. A setting of 10 on the thermostat dial will result in the highest temperature.

Maintenance

Proper cleaning of the unit is all that is required. When rubbing or scouring, always move gently in the direction of the polish lines (grain). A Scotch Brite general purpose pad may be used. DO NOT USE STEEL WOOL. DO NOT USE ANY DE-LIMEING PRODUCT ON THIS UNIT.



ATLAS METAL INDUSTRIES, INC.

(Subsidiary of Mercury Aircraft Incorporated)