










HOW TO PROGRAM MENU TEMPERATURES & TIMES ON MENU KEYS 1 THRU 8.

1. Press power rocker switch to on. (Green indicator light comes on)
2. Press  &  keys simultaneously for (6) seconds until SP 1 flashes alternately with the preset menu temperature.
3. Press desired menu key to be programmed. (Red light comes on over key)
4. Press  or  keys to desired menu temperature.
5. Press lighted menu key again t 1 flashed alternately with set time.
6. Press  or  keys to desired menu time in min:sec.
7. Press next menu key for programming if desired & repeat steps 4 thru 7.
8. When menu keys are programmed press  & LOC appears. If you want all entered menu temperatures & times secured press  & 1 will be displayed. If you don't want program security press  & 0 will be displayed.
9. Press  once more & you will exit program mode & 00:00 appears.
10. After orange heat light goes off, pressing any programmed menu key will start that menu temperature/time cycle. **Always press the menu key after last piece per load is dropped in the basket.**

NOTE: During the above process, if no keys are pressed for 60 seconds the computer will jump out of the program mode & you will have to start over if your programming is not complete. Any of your programmed temperatures & times will be retained unless reprogramming occurs.

NOTE:

Press and hold clock key for six seconds, t1 will appear in the display. Press the clock key two more times, the actual temperature will be displayed.