



ORDER BY PART NUMBER, NOT CODE NUMBER

CODE NO.	PART NO.	NO. REQ.	DESCRIPTION	CODE NO.	PART NO.	NO. REQ.	DESCRIPTION
1	4310	1	Stopper Assembly	17	N/A	1	Tailpipe Gasket
2	N/A	1	Sink Flange	18	N/A	1	Tailpipe Flange
3	N/A	1	Fiber Gasket	19	N/A	2	Screw
4	N/A	1	Backup Ring	20	N/A	1	Tailpipe
5	N/A	1	Mounting Ring	21	4577	1	Service Wrenchette (Not Shown)
6	N/A	3	Screw	22	3255U	1	Stator Assembly
7	N/A	1	Snap Ring	23	3706C	1	Start Switch Assembly
8	70368	1	Mounting Gasket	24	2267BYZZ	1	Overload Protector
9	N/A	1	Body Flange	25	71875D	1	End Frame Assembly (Includes code 26)
10	3173EY	1	Mounting Assembly (Includes codes 2 - 7 & 9)	26	N/A	1	Ground Screw
11	73255ZZ	1	Trim Shell	27	4134	1	Wire Shield
12	73449	2	Clip	28	72647A	1	Terminal Cover Assembly (Includes code 29)
13	73193A	4	Thru Bolt	29	N/A	1	Terminal Cover Screw
14	N/A	1	Enclosure Assembly (Not Available - Replace Unit)	30	73119	1	Installation Care & Use (Not Shown)
15	2467	1	Centrifugal Actuator Assy				
16	73130	1	Installation Kit (Includes codes 17-21)				