



**ORDER BY PART NUMBER, NOT CODE NUMBER**

CODE NO.	PART NO.	NO. REQ.	DESCRIPTION	CODE NO.	PART NO.	NO. REQ.	DESCRIPTION
1	4310	1	Stopper Assembly	15	N/A	1	Tailpipe Gasket
2	N/A	1	Sink Flange	16	N/A	1	Tailpipe Flange
3	N/A	1	Fiber Gasket	17	N/A	2	Screw
4	N/A	1	Backup Ring	18	N/A	1	Tailpipe
5	N/A	1	Mounting Ring	19	4577	1	Service Wrenchette (Not Shown)
6	N/A	3	Screw	20	8629T	1	Stator Assembly
7	N/A	1	Snap Ring	21	3706C	1	Start Switch Assembly
8	70368	1	Mounting Gasket	22	2267DBZZ	1	Overload Protector
9	N/A	1	Body Flange	23	71875D	1	End Frame Assy (Includes Code 24)
10	3173DA	1	Mounting Assy (Incl. codes 2 - 7 & 9)	24	N/A	1	Ground Screw
11	73193A	4	Thru Bolt	25	4134	1	Wire Shield
12	N/A	1	Enclosure Assembly (Not Available - Replace Unit)	26	72647A	1	Terminal Cover Assy (Incl. Code 27)
13	2467	1	Centrifugal Actuator Assy	27	N/A	1	Terminal Cover Screw
14	73130	1	Installation Kit (Incl. codes 15-19)	28	73104	1	Installation, Care & Use Manual (Not Shown)