

727

DAILY CLEANING PROCEDURES TO FOLLOW



Push Power switch to OFF.



- 1) Open the door.
- 2) Remove the Over-flow tube,
- 3) Drain unit by pushing and holding the white button.



Water must all drained from the wash tank.
 Do not flush any dirt down the drain.
 Remove the spin-arm and the screens.



Clean the screens and wash tank of debris.
 Rinse wash tank.



 
Replace all parts in the wash tank.
 Leave the dishwasher empty overnight
 and the door closed.




OR refill for more usage by closing the
 door and pressing the start button.

727

DAILY OPERATION PROCEDURES TO FOLLOW

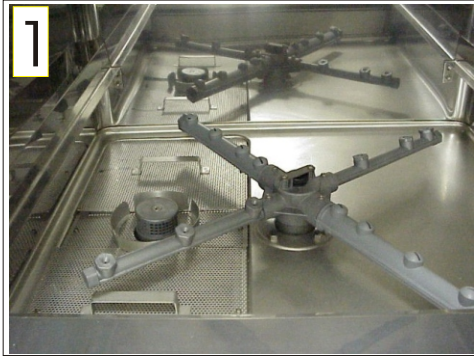

 1
 At the beginning of the day
 Make sure dishwasher is empty of water
 and the wash tank is clean of debris.

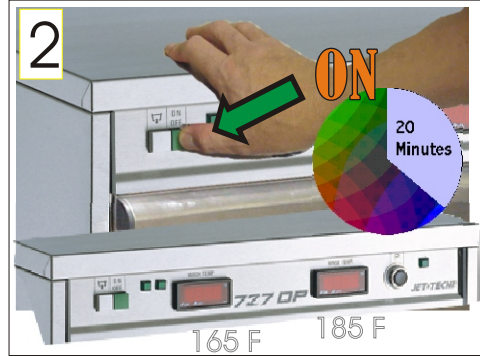

2
 Close the door
 and press the power button.
 Wait 20 minutes for the water to
 attain optimum washing temperatures.



 
3
 Pre-rinse dishes and/or glasses and cups.



4
 Load rack in the dishwasher,
 Close the door.



5
Start Wash Cycle
 Press the Start button.
 Wash cycle is 3 minutes.

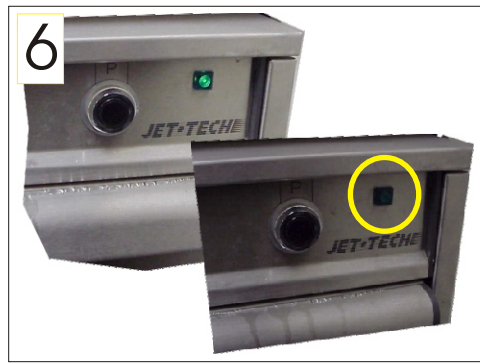

6
 Wait for the green light to turn off
 before taking the tray out.
 Take the tray out to let air-dry the dishes.
 Repeat from step #3.