 


# 737


## DAILY CLEANING PROCEDURES TO FOLLOW



Push Power switch to OFF.

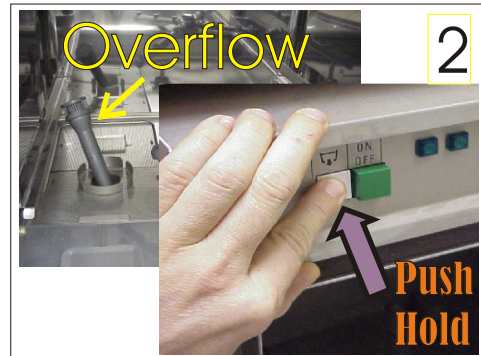

- 1) Open the door.
- 2) Remove the Over-flow tube,
- 3) Drain unit by pushing and holding the white button.

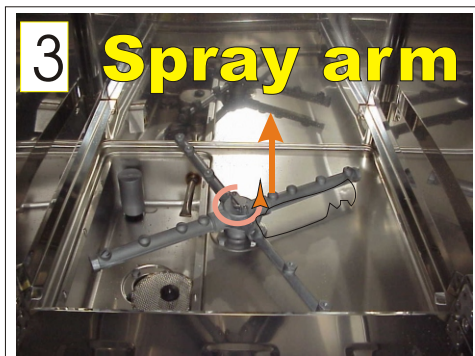


Water must all drained from the wash tank.  
 Do not flush any dirt down the drain.  
 Remove the spin-arm and the screens.



Clean the screens and wash tank of debris.  
 Rinse wash tank.




Replace all parts in the wash tank.  
 Leave the dishwasher empty overnight

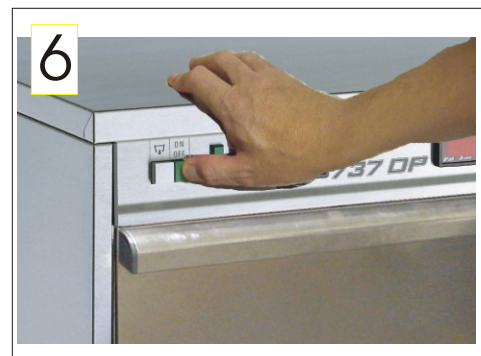

OR refill for more usage by closing the door and pressing the start button.

# 737

## DAILY OPERATION PROCEDURES TO FOLLOW

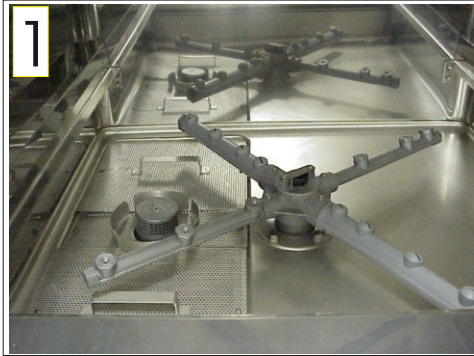

1  
 At the beginning of the day  
 Make sure dishwasher is empty of water  
 and the wash tank is clean of debris.



2  
 Close the door  
 and press the power button.  
 Wait 20 minutes for the water to  
 attain optimum washing temperatures.




3  
 Pre-rinse dishes and/or glasses and cups.



4  
 Load rack in the dishwasher,  
 Close the door.



5  
**Start Wash Cycle**  
 Press the Start button.

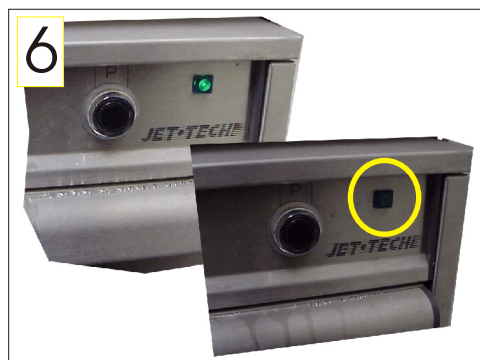

6  
 Wait for the green light to turn off  
 before taking the tray out.  
 Take the tray out to let air-dry the dishes.  
 Repeat from step #3.