


F 14

DAILY OPERATION PROCEDURES TO FOLLOW



At the start of each day, ensure dishwasher is empty (no water) and that the wash tank is clean (no debris)

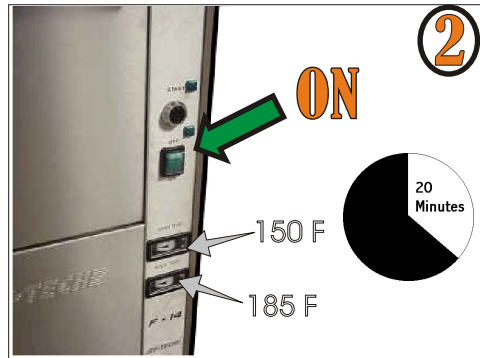


Close the door, press the power button to ON. Wait for the water to obtain optimum washing temperature.




Pre-rinse dishes, glasses and cups.



Load rack in the dishwasher and close the door.

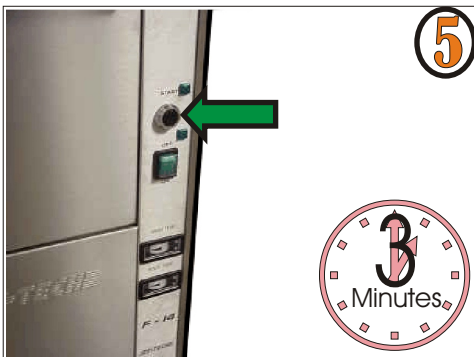


Press the Start button. Wash cycle lasts approximately 3 minutes.

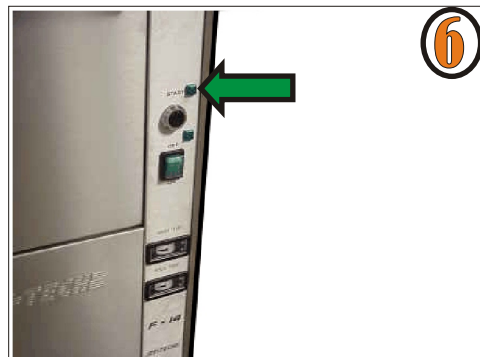


Wait for the green light to turn OFF before removing the rack. Let dish tray air dry. Repeat from step #3.

F 14

DAILY CLEANING PROCEDURES TO FOLLOW

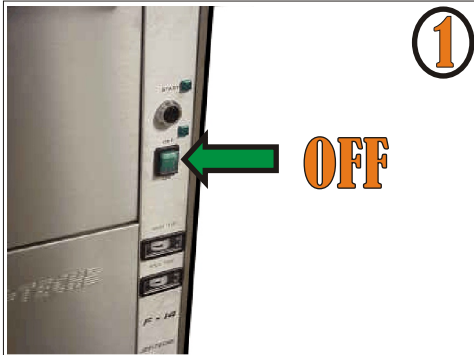

Turn Power switch to OFF

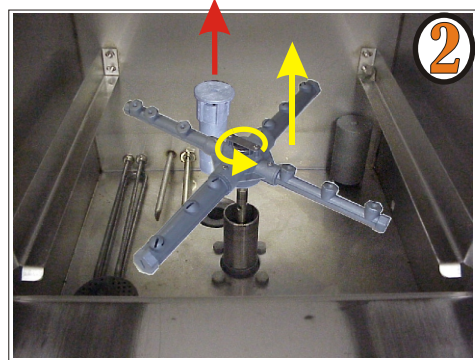


Open the door.
Remove the Over-flow tube,
the spin-arm and the screens.




Let the water drain in the wash tank.



Clean the screen and wash tank of debris.
Be careful not to put food particles down the drain.
Rinse wash tank.

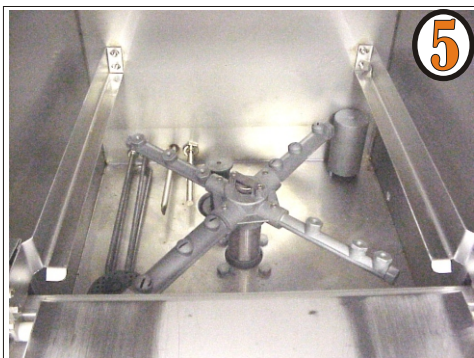

Put all parts back in the wash tank.
Leave the dishwasher empty overnight

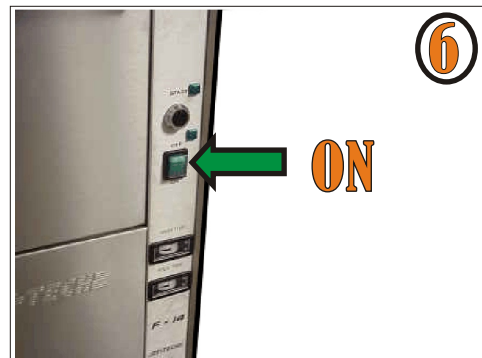

OR refill for more usage by closing the
door and pressing the ON/OFF switch.