


Connecting your new F-14

This dishwasher must be installed on a level, rigid, nonflammable surface. Ensure that the machine is level by installing the feet (shipped in the wash tank of the machine) and adjusting the levelling. Be sure to provide adequate space for water, drain and electrical connections.

ELECTRICAL SUPPLY

A 115 Volt - 15 Amp circuit breaker is required for this washer (please make sure that this outlet is grounded). A standard power-cord with plug is provided for your convenience for the 115 Volt version.

NOTE: If you have purchased the optional 208 Volt version, the rear access panel must be removed prior to making connections. The circuit used for this unit should be independent from any other equipment. (Make sure that the power stays within the prescribed voltages).

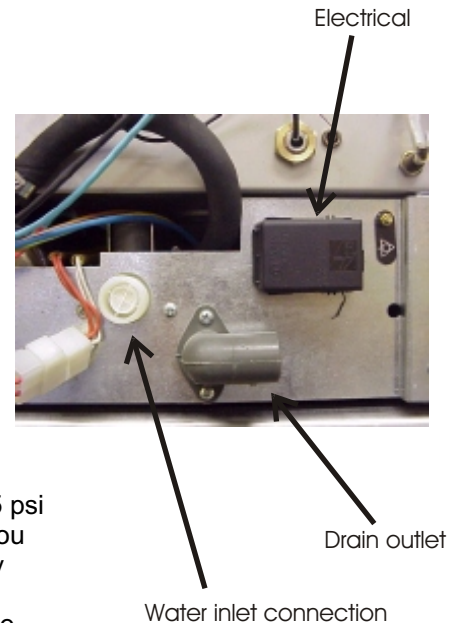

WATER SUPPLY

A 3/4" NPT coupling is required with 25 psi. dynamic pressure. A water pressure regulator is required. The water pressure cannot be less than 15 psi or exceed 25 psi. If the water pressure exceeds the prescribed amount, you will get inconsistent washing temperature, premature failure and thus may void the warranty.

Incoming water temperature must be 140° F (60° C). An easily accessible shut-off valve is recommended --- making installation, service and repairs easier.

This size hose (3/4 NPT) is standard for most warewashing machines. Fittings should be available from your local hardware or plumbing supply house.


Flexible hoses must be used to make installation, servicing and maintenance easier.

Make sure that the water is free from calcium and hard water deposits. For these situations, an on-line water cartridge system is highly recommended. Build-up of calcium and lime deposits in the washer may occur and servicing will be required on a more frequent basis which will not be covered by the warranty.



DRAIN CONNECTION

This washer has a gravity type drain. Since this unit is a 'counter-type' installation, your flexible drain hose, should be connected to the drain outlet elbow at the rear of the unit behind the rear access panel; and extended through the side opening directly into a floor drain or sink (see Figure)

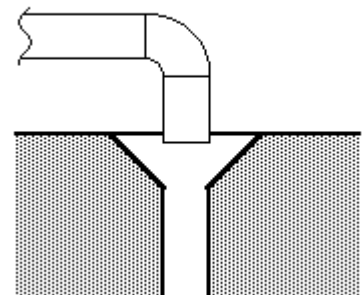

All panels must be back on the unit when the installation is finished.

DO NOT manually fill wash tank. Let the dish-washer fill itself when the power is turned ON.