

Connecting your new F-22

This dishwasher must be installed on a level, rigid, nonflammable surface. Ensure that the machine is level by installing the feet (shipped in the wash tank of the machine) and adjusting the levelling. Be sure to provide adequate space for water, drain and electrical connections. If you plan to install a Detergent Pump, do it before the back of the unit becomes inaccessible.


WATER SUPPLY:

A 3/4" NPT fitting is required with 25 psi. dynamic pressure. A water pressure regulator is required. The flowing water pressure cannot be less than 15 psi or exceed 25 psi. If the water pressure exceeds the prescribed amount, you will get inconsistent washing temperature, premature parts failure and thus may void the warranty.

Incoming water temperature must be 140° F (60° C). An easily accessible shut-off valve is recommended --- making installation, service and repairs easier. This size hose (3/4"NPT) is standard for most warewashing machines. Fittings should be available from your local hardware or plumbing supply house.

Flexible hoses must be used to make installation, servicing and maintenance easier.

Make sure that the water is free from calcium and hard water deposits. For these situations, an on-line water cartridge system is highly recommended. Build-up of calcium and lime deposits in the washer may occur and servicing will be required on a more frequent basis which will not be covered by the warranty.

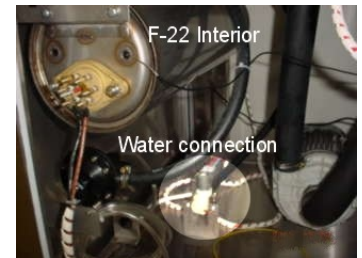

DRAIN:

This dishwasher has a gravity drain. Maximum height of the drain should not exceed 20" (50cm). A 1.5" ID flexible drain hose* is recommended to facilitate maintenance and servicing of the machine.

ELECTRICAL:

A 208-240 volt, 60 Hz, Single Phase or Three Phase circuit is required for this unit. Check the rating plate on the machine for amp draw. In spite of the fact that the rating plate shows 208 volts, the unit is designed function properly from 208 volts to 240 volts. The terminal block is located in the control box on the side of the unit. The faceplate of the control panel pulls out, exposing the terminal block. Pass the cable through the cable strain relief at the back and connect the wires to the terminals L1 (brown wire), L2 (blue wire), L3 (black wire) & Ground (yellow & green wire). There should be sufficient cable length to permit the machine to be pulled out for service.



DO NOT FILL DISHWASHER MANUALLY. LET THE DISHWASHER GO THROUGH ITS FILL CYCLE.

IMPORTANT NOTE

Reasonable access to and around the machine for service must be provided. Disconnecting of hard plumbing or removal of counter tops or cabinets, etc., for servicing is not covered by warranty.

All panels must be on the unit when the installation is finished.

