



INSTALLATION KIT

FOR MODELS:

F-14, F-16DP, F-18DP,
727, 737, X-32

ORDER "KIT D"

FOR MODELS:

F-18, F-20, F-22 &
747

ORDER "KIT G"




"KIT D" CONTENTS:

Fill hose	11510
PRV Valve	IR56
Brass Adaptor	
Rubber Washer	
Filter washer	
Drain hose	60561
CLAMP	60082
(for drain opening of 1.065")	

Or

"KIT G" CONTENTS:

Fill hose	11510
PRV Valve	IR56
Brass Adaptor	
Rubber Washer	
Filter washer	
Drain hose	60556
CLAMP	60083
(for drain opening of 1.5")	

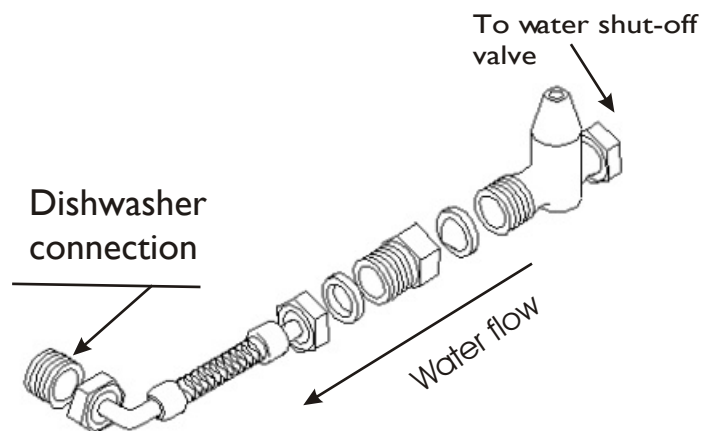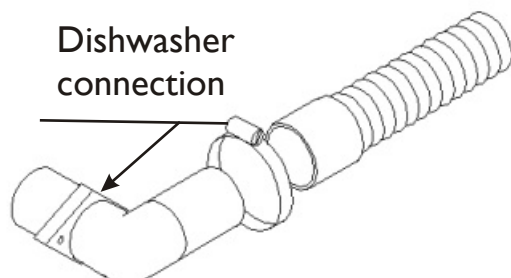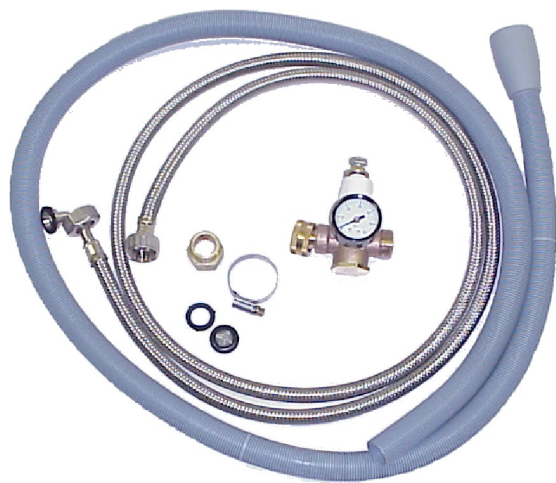




Instructions

✓ The pressure regulator must be adjusted during the first fill cycle of the dishwasher. Familiarize yourself with the dishwasher operation as explained in the "INSTRUCTION & MAINTENANCE MANUAL" supplied with every dishwasher. The flow pressure must be adjusted to **25 PSI**. First, loosen the lock nut on the adjusting screw. Start the Fill Cycle of the dishwasher. Turn the adjusting screw counterclockwise to reduce the flow pressure while watching the pressure gauge (counter-clockwise to increase the pressure). Once the pressure of 25 PSI achieved, tighten the locknut.

NOTE: This adjustment can only be done during the Fill Cycle.




NOTE: Static pressure (no flow) will increase after the Fill Cycle. This is normal.

⚠ Do not fill dishwasher manually. Let the unit fill itself. First fill time is about 4 minutes. Subsequent fill time should be about 2 to 2 ½ minutes.

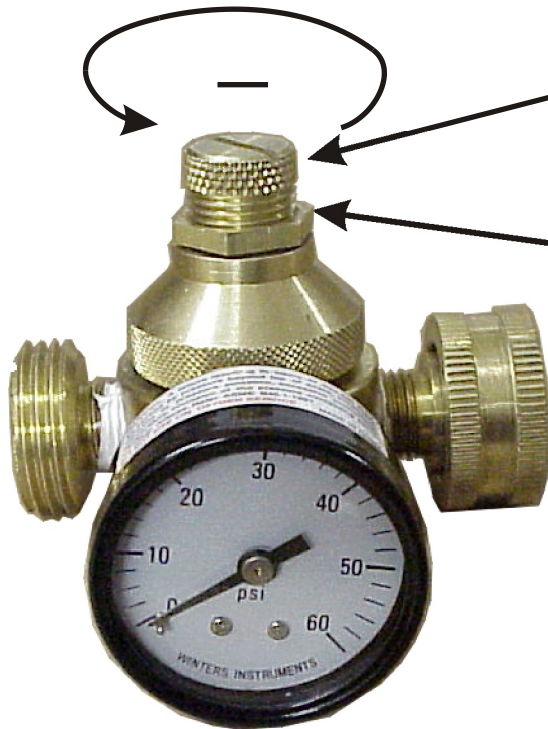

Turn counterclockwise to lower pressure

Loosened

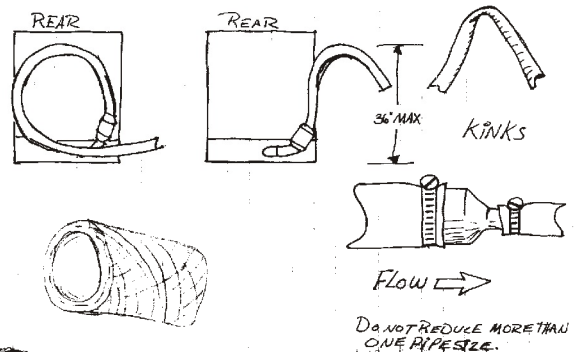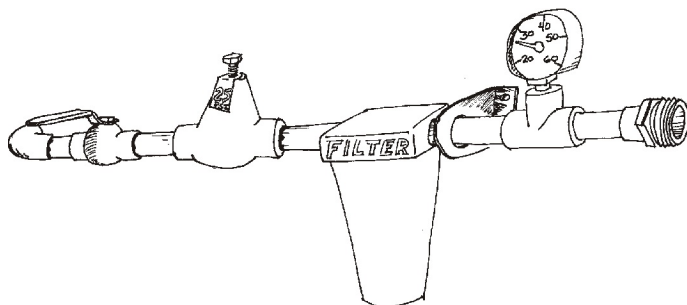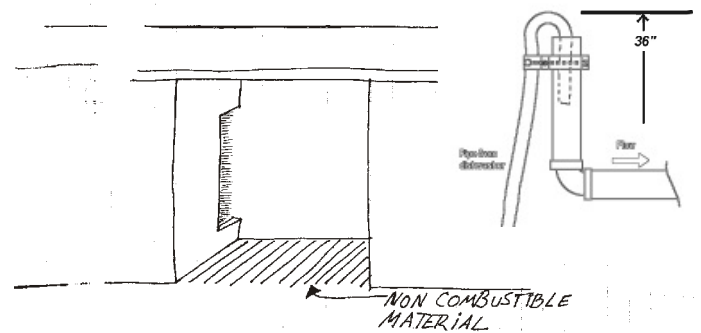






Instructions

✓ The pressure regulator must be adjusted during the first fill cycle of the dishwasher. Familiarize yourself with the dishwasher operation as explained in the "INSTRUCTION & MAINTENANCE MANUAL" supplied with every dishwasher. The flow pressure must be adjusted to **25 PSI**. First, loosen the lock nut on the adjusting screw. Start the Fill Cycle of the dishwasher. Turn the adjusting screw counterclockwise to reduce the flow pressure while watching the pressure gauge (counter-clockwise to increase the pressure). Once the pressure of 25 PSI achieved, tighten the locknut.

NOTE: This adjustment can only be done during the Fill Cycle.

NOTE: Static pressure (no flow) will increase after the Fill Cycle. This is normal.

⚠ Do not fill dishwasher manually. Let the unit fill itself. First fill time is about 4 minutes. Subsequent fill time should be about 2 to 2 ½ minutes.

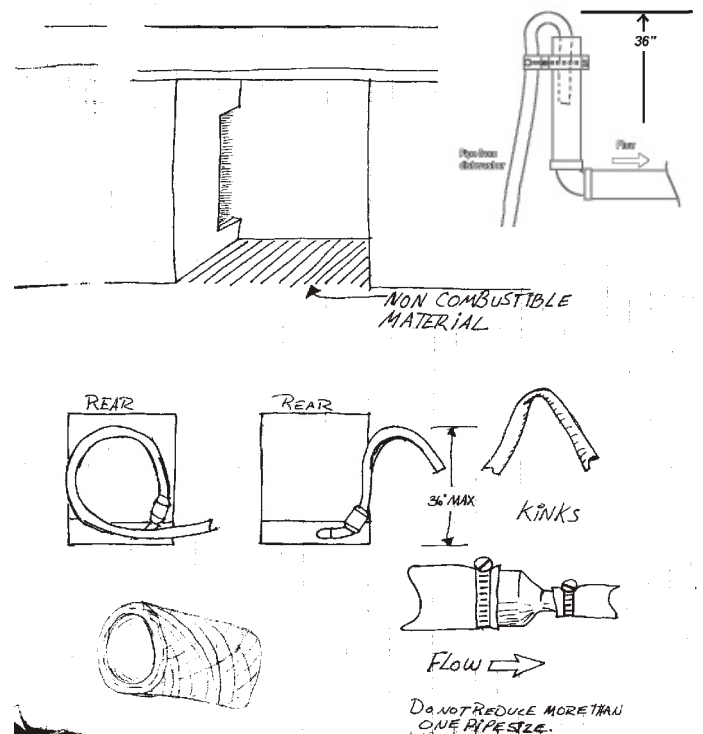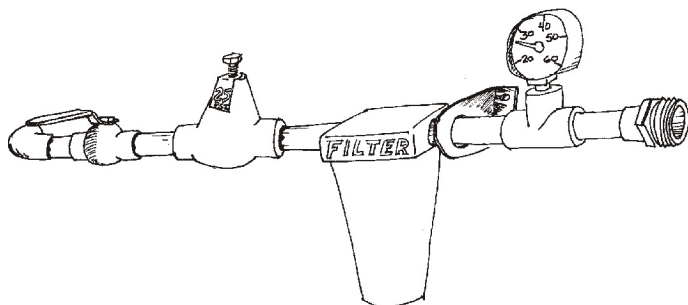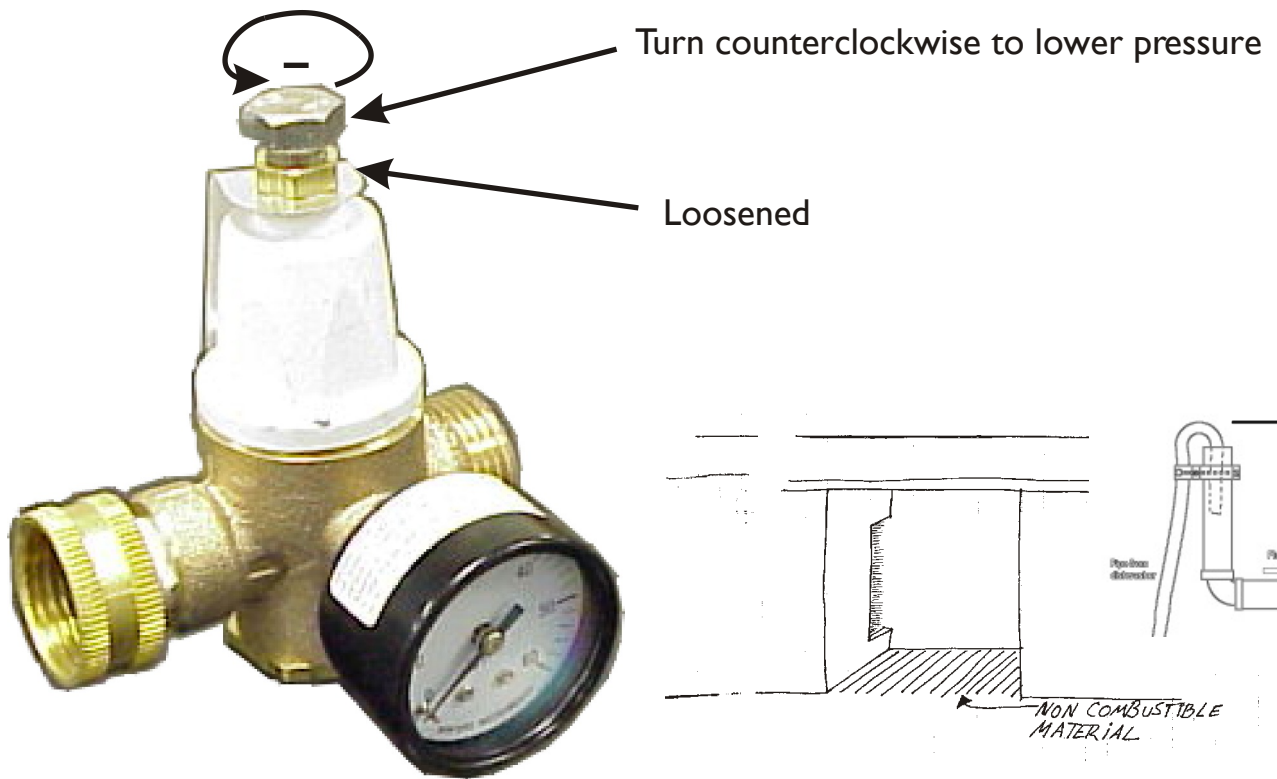



Instructions

2003-02-10

INSTALLATION KIT

FOR MODELS:

F-14, F-16DP, F-18DP, 727, 737 & X-32

ORDER "KIT D"

"KIT D" CONTENTS:

- Fill hose (11510)
- Pressure regulator valve (07-9003)
- Brass adaptor (07-9008)
- Rubber washer (07-9009)
- Filter washer (07-9010)
- Drain hose 70" 1.78m (60556)
- Clamp (60082)
- (for drain opening of 1.065" 27mm)

FOR MODELS:

F-18, F-20, F-22 & 747

ORDER "KIT G"

"KIT G" CONTENTS:

- Fill hose (11510)
- Pressure regulator valve (07-9003)
- Brass adaptor (07-9008)
- Rubber washer (07-9009)
- Filter washer (07-9010)
- Drain hose 62" 1.58m (60561)
- Clamp (60083)
- (for drain opening of 1.5" 38mm)




- ✓ Thread the pressure gauge into the pressure regulator using Teflon tape to seal the threads.
- ✓ Connect the pressure regulator (female side) to a shut-off valve.
- ✓ Thread the brass adaptor, using the filter washer, to the pressure regulator (male side).
- ✓ Connect the straight end of the fill hose, using the plain washer, to the brass adaptor.
- ✓ Connect the elbow end of the fill hose to the "threaded water inlet" at the back of the dishwasher.
- ✓ Check that all of the connections are tight. Then, open the shut-off valve slowly, while checking for leaks.
- ✓ The pressure regulator must be adjusted during the first fill cycle of the dishwasher. Familiarize yourself with the dishwasher operation as explained in the "INSTRUCTION & MAINTENANCE MANUAL" supplied with every dishwasher. The flow pressure must be adjusted to **25 PSI**. First, loosen the lock nut on the adjusting screw. Start the Fill Cycle of the dishwasher. Turn the adjusting screw counterclockwise to reduce the flow pressure while watching the pressure gauge (counterclockwise to increase the pressure). Once the pressure of 25 PSI achieved, tighten the locknut.

NOTE: This adjustment can only be done during the Fill Cycle.


NOTE: Static pressure (no flow) will increase after the Fill Cycle. This is normal.

! Do not fill dishwasher manually. Let the unit fill itself. First fill time is about 4 minutes. Subsequent fill time should be about 2 to 2 1/2 minutes.


The drain hose can be connected to the dishwasher drain outlet with the mechanical clamp.

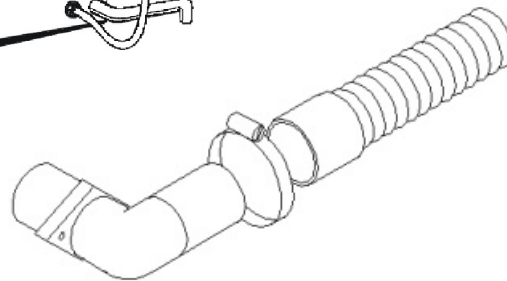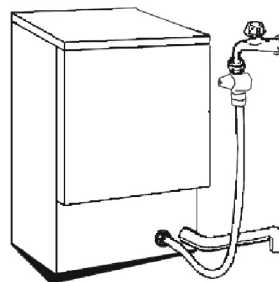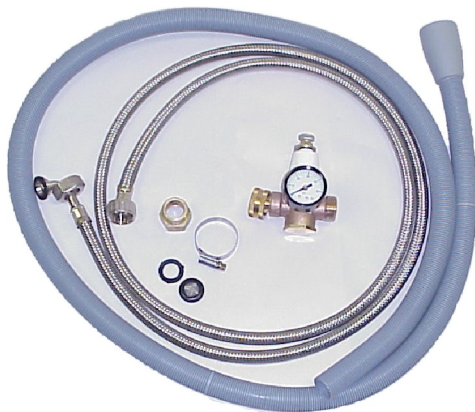

To water shut-off valve

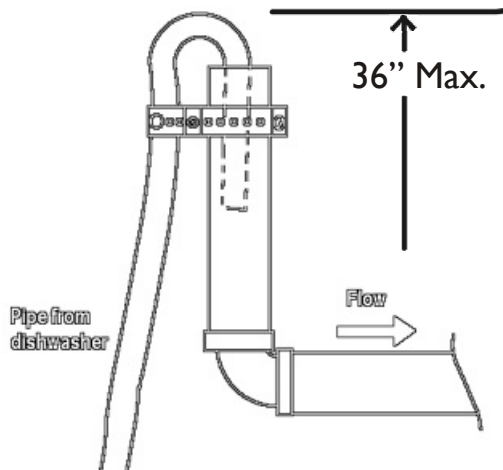

Dishwasher connection

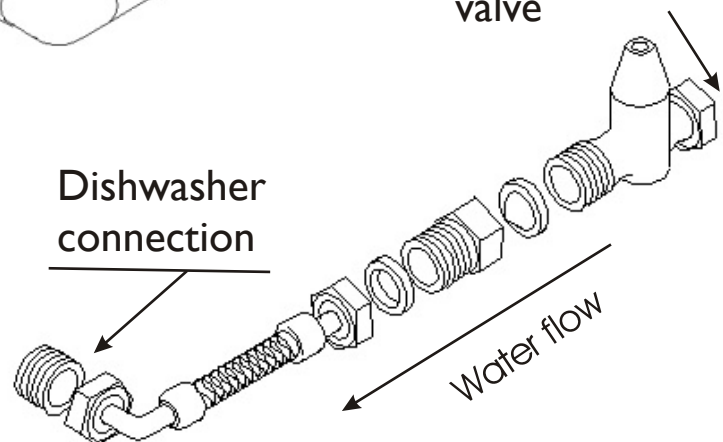

(888) ASK-4-JET (275-4538)