




Computer, 18 Water Cooker, Pitco P/N PP11375 Quick Reference Card

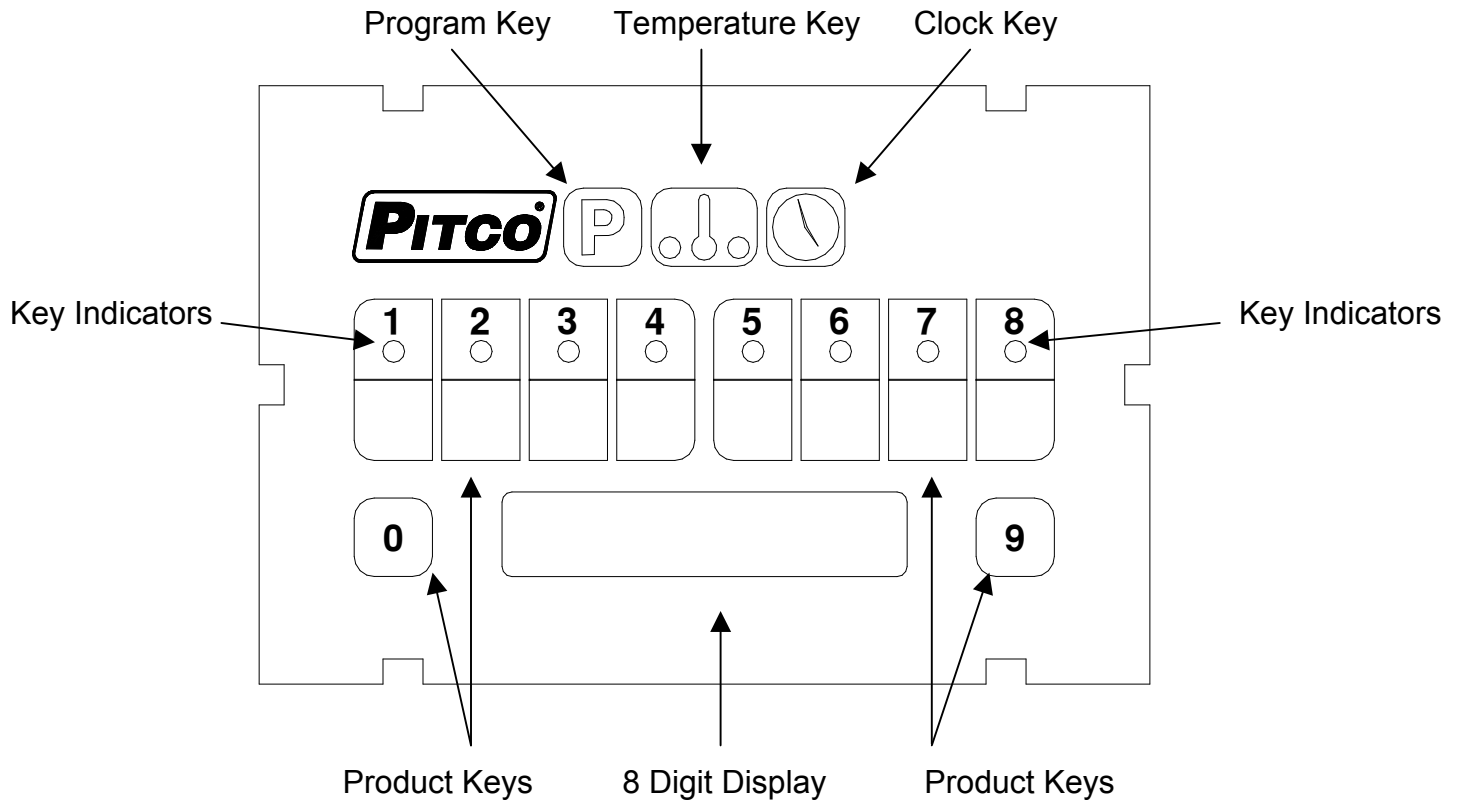

TO CHECK ACTUAL TEMP: After 5 sec, computer returns to normal operation.

 
TO CHECK SET TEMP: After 5 sec, computer returns to normal operation.

TO CHECK COOK, SHAKE AND HOLD TIMES: Then the desired product key, for example:



NOTE: THE TIMES WILL BE DISPLAYED IN SEQUENCE, PAUSING MOMENTARILY ON EACH DISPLAYED TIME, AND THEN THE CONTROL WILL RETURN TO NORMAL OPERATION.

TO START A COOK: When the display on the computer shows [READY], [ACT xxx°F] or (xxx = current vat temp.), press the desired product key. For example, press product key 4 to start the cook timer on key 4. The key indicator above the product key will begin to flash, and the cook timer should appear on the computer display. When multiple cook timers are running, the cook timer with the least amount of time remaining will be displayed.






TO CANCEL A COOK: Press the product key with a flashing key indicator to cancel a running cook timer. If there are no other cook timers running, the computer display will show [READY], or [ACT xxx°F] (xxx = current vat temperature).


Level 1 Programming





TO ENTER LEVEL 1 PROGRAMMING MODE: While there are no active cook timers running and the computer display shows [READY], [FILLING], or [ACT xxx°F],

(xxx = current vat temp.) press  and the computer display will show [PROGRAM].

Note: All of the Level 1 programming options shown below must begin with the computer displaying [PROGRAM].




TO PROGRAM SETPOINT TEMP: Press , then enter in the desired temperature using keys 0-9. Press   to save/exit from this option.

TO PROGRAM A COOK TIME: Press , the display shows [SELECT], and all the key indicators will light up. Then press the product key for the desired cook timer to program. The key indicator above the desired product key will remain lit, and the computer display will show [xTM mm:ss] where x = the desired product key, and mm:ss is the programmed cook time in minutes:seconds. Enter in the desired cook time using keys 0-9.

Press  to program the Shake Time(or    to save/exit Level 1 programming). The display shows [xSH mm:ss]. Enter in the desired Shake Time using keys 0-9.

Press  to program the Hold Time(or    to save/exit Level 1 programming).

The display shows [xHDh.mm:ss], where h:mm:ss is the programmed cook time in hour:minutes:seconds. Enter in the desired Hold Time using keys 0-9.

Press    to save/exit from this option.

For additional programming instructions or more detailed operational information for this control, refer to the Pitco document L20-308, *18 Water Cooker Computer, Pitco P/N PP11375, Operations Manual*.